




User Manual

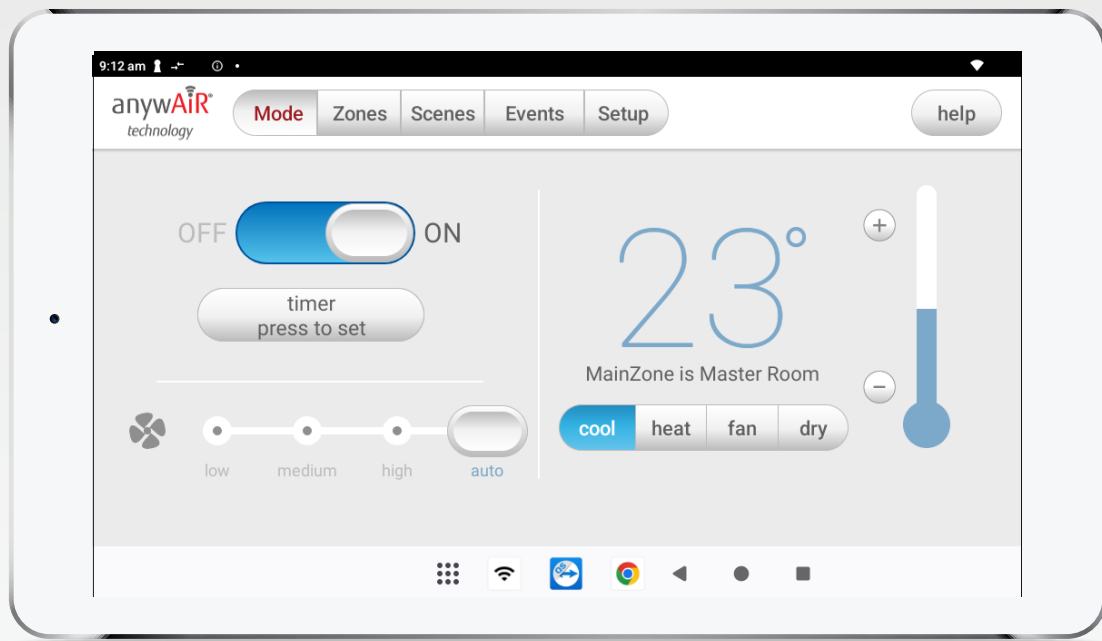


Android Tablet User Manual

Contents

1 - TABLET	3
2 - SETTING UP Wi-Fi ON YOUR WALL MOUNTED TOUCH SCREEN	4
3 - APPLE DEVICES	6
4 - ANDROID DEVICES	7
5 - REMOTE ACCESS	8

1 - TABLET

The anywAiR app runs on its own dedicated wall mounted touch screen. This touch screen creates a hub for control of your anywAiR system.

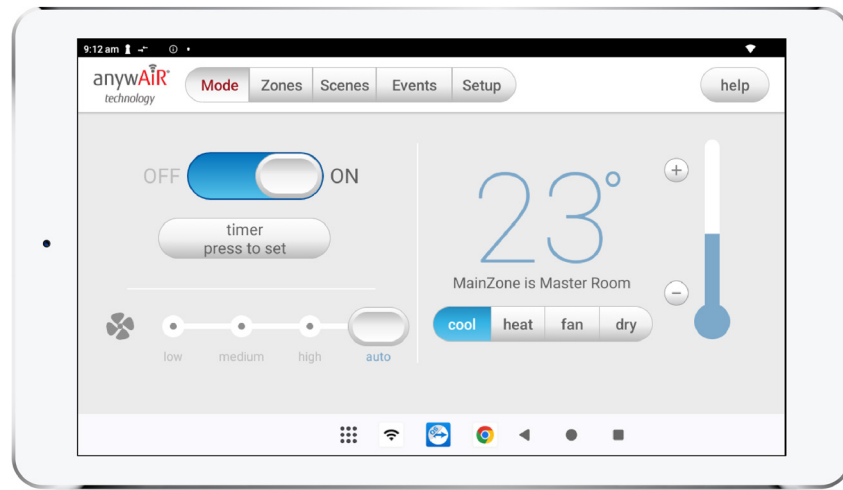

The anywAiR touch screen runs Android, which means it can do so much more than just control your anywAiR system. You can also install apps such as News apps, Email & Weather from the Google Play Store.

Your anywAiR touch screen is permanently attached to your wall with the ability to pivot between portrait & landscape modes so that you can enjoy all your apps in the orientation that suits them best.

To exit the anywAiR app press the home button from any screen as pictured below.



If you are not familiar with the Android operating system, an abundance of information can be found on the internet.

2 - SETTING UP Wi-Fi ON YOUR WALL MOUNTED TOUCH SCREEN

AnywAiR allows you to control your anywAiR system from your Android or Apple devices, after installing the anywAiR app on your phone.


Smart Device control can be used inside your home via your personal Wi-Fi network or remotely using your phone's internet connection.

To use this option you will first need to connect your wall mounted touch screen to your Home Wi-Fi:


1. Ensure you have an existing home Wi-Fi network & you have your password on hand.

TIP: Some routers have the network name (SSID) & password printed on a sticker located on the bottom of the router.


2. Go to your anywAiR wall mounted touch screen & press the home button.

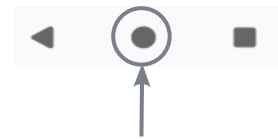

3. Press the Wi-Fi icon as shown in the image.

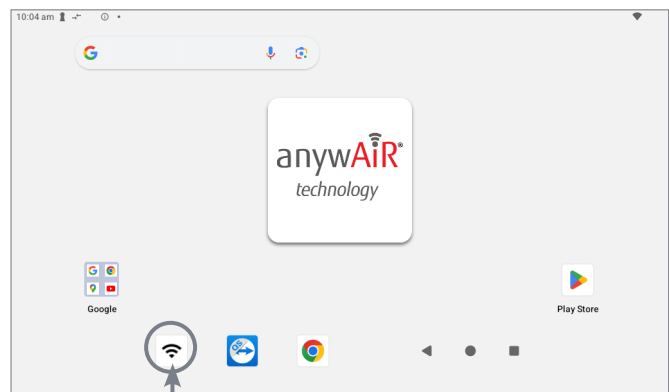


4. Find your home Wi-Fi network in the list then press it.

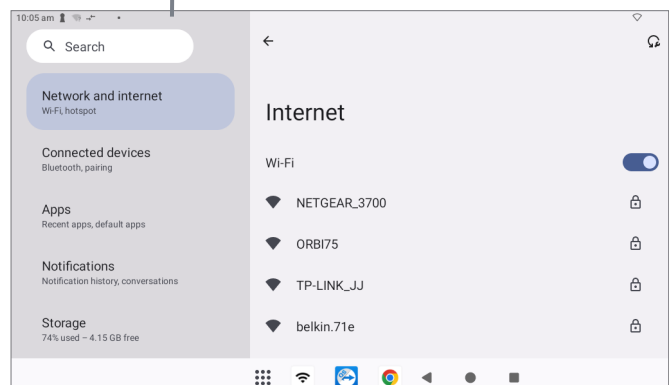


2 - SETTING UP Wi-Fi ON YOUR WALL MOUNTED TOUCH SCREEN

5. Enter your home Wi-Fi network password, then press the enter button.

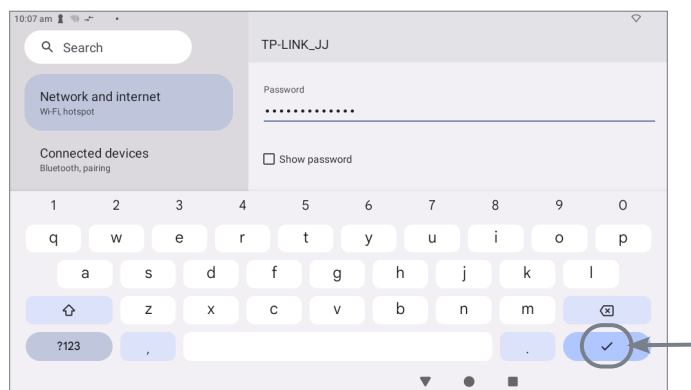

6. Once you have connected successfully (it may take up to 2 minutes) you will see the word Connected below your home Wi-Fi network name.

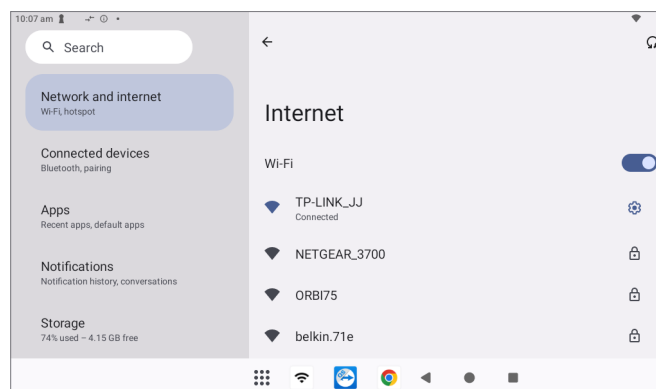

3 - APPLE DEVICES

To start downloading items from the Apple App Store, you need to first have an Apple ID.

1. If you do not have an Apple ID and password, then create one and verify your email by checking and following the instructions in the email sent to you from Apple.
 - a. See instructions here: <http://support.apple.com/kb/ht2534>
 - b. Be sure to set your country to Australia or New Zealand.
2. Download the anywAiR app from the Apple App Store.
 - a. Using your iPhone/iPod/iPad - click on the App Store icon.
 - b. Click on the Search tab at the bottom bar of the screen.
 - c. Type "anywAiR" into the search box.
 - d. Press Search.
 - e. Select the anywAiR app (It's free).
 - f. To install, press the blue GET button, and then INSTALL button.
 - g. Enter your Apple ID password (it's case sensitive).

Installation Troubleshooting

1. Do you have an older Apple device? anywAiR requires your device to be running on latest Apple iOS.

TIP: Check if you can update your iOS version.

2. If you are using an iPad, then in the App Store you will need to select the iPhone apps button at the top of the search results screen.
3. Check your Apple device is connected to your Home Wi-Fi.

Need help? Please call 1300 364 484(AU) , 04 974 4719(NZ).

4 - ANDROID DEVICES

To start downloading items from the Google Play Store app, you need to add a Google Account to your Android phone.

Here's how to add a Google Account to your device:

1. Open the "settings" app.
2. Under "Accounts", press **+ Add account**.
3. Select Google.
4. Choose **Existing** (if you want to add an account you already have) or **New** (if you wish to create a new one).
5. Follow the instructions to add or create your google account.

Download the anywAiR app from the Google Play Store.

1. Open the Google Play Store app on your device.
2. Search for "anywAiR"
3. Press the anywAiR app.
4. Press **INSTALL** (It's free).
5. Press **Accept** after reviewing the app's permissions

Installation Troubleshooting

1. Do you have an older Android device? AnywAiR requires your device to be running on latest Android version.

TIP: Check if you can update your Android version.

2. Check your Android phone is connected to your Home Wi-Fi.

Need help? Please call 1300 364 484(AU) , 04 974 4719(NZ).

5 - REMOTE ACCESS

AnywAiR has the ability to control your system from your Android or Apple smart phone when you are outside of the home Wi-Fi network using your phones internet connection (e.g. 4G/5G).

Remote access requires a reliable Wi-Fi connection between your modem/router & your wall mounted anywAiR tablet.

Enable/Disable Remote Access



Remote access is enabled by default;

These instructions show how to disable or re-enable remote access.



NOTE: Disabling remote access also clears all paired smartphones/tablets.

The below instructions assume your anywAiR wall mounted touch screen is connected to the home Wi-Fi network (as shown in section 2) & you can control your system from your mobile device when connected to your home Wi-Fi network.

1. Open the anywAiR app on your wall mounted touch screen and press the Setup button.
2. Press the Remote Access button.

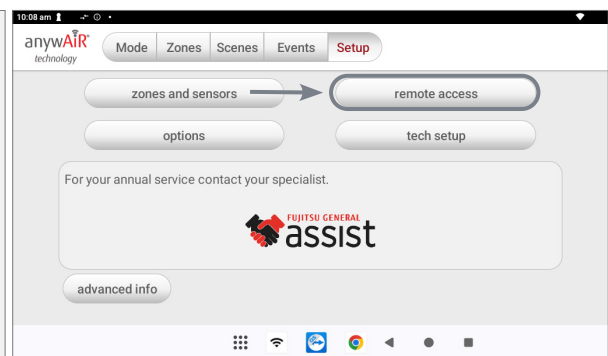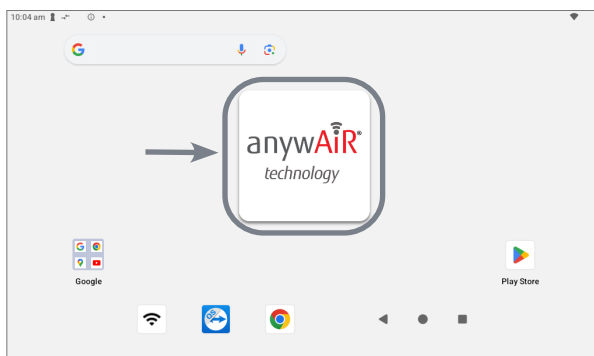

3. To disable remote access, press the Remote Access toggle button to grey. Press disable button to confirm.
4. To enable remote access press the remote Access toggle button to red.

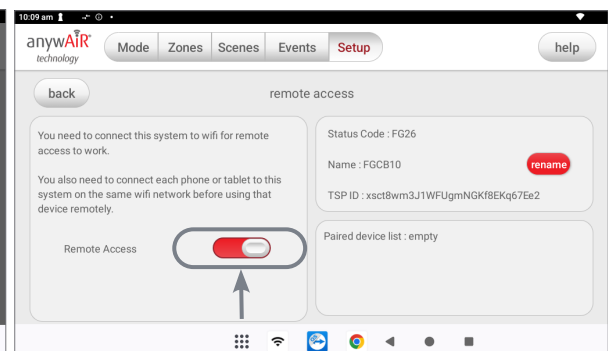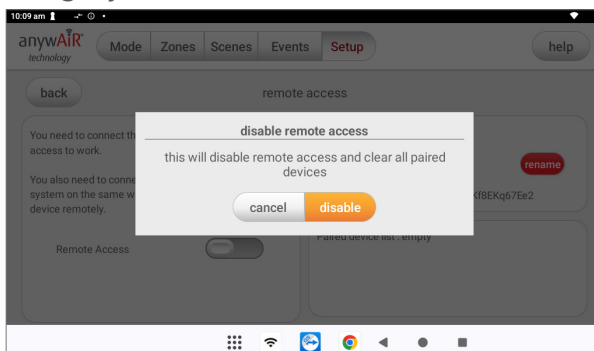

5 - REMOTE ACCESS

5. After pressing enable, it can take up to 5 minutes before remote access is fully enabled. While your system is enabling remote access you will notice the status code will change numerous times. Once remote access has been successfully enabled, the status will change to FG26. If after 5 minutes your status is not FG26, then please refer to troubleshooting guide below.
6. To pair your phone with your anywAiR touch screen open the anywAiR app on your Android or Apple device while it is connected to the same home Wi-Fi network as your anywAiR tablet then wait 10 seconds.
7. Congratulations, when your phone has an internet connection you will now be able to use the anywAiR app on your phone to control your anywAiR system.

Troubleshooting

The following info may be useful to the homeowners I.T. professional when troubleshooting remote access in the anywAiR app.

STATUS	DESCRIPTION	ACTION
FG20	No internet access	Check the anywAiR wall mounted touch screen is connected to the home Wi-Fi network & has access to the internet.
FG21	Remote Connection Error	Please try again in 10 minutes
FG22	The wall mounted touch screen is no longer connected to the internet	Check the anywAiR wall mounted touch screen is connected to the home Wi-Fi network & has access to the internet.
FG26	Remote Access should be working	Your remote access should be working, if you are having trouble try connecting your phone via Wi-Fi for 10 seconds.

anywAiR User Manual

Contents


1 - INTRODUCTION	11
2 - MODE PAGE	12
3 - ZONES PAGE	14
4 - TEMPERATURE CONTROL (OPTIONAL)	15
5 - CONSTANT ZONES	18
6 - SCENES PAGE	19
7 - SCENE EDITOR PAGE	20
8 - EVENTS PAGE	21
9 - EVENT EDITOR PAGE	22
10 - SETUP PAGE	24
11 - OPTIONS	25
12 - GOOGLE HOME	27
13 - OPTIONAL ADD-ONS (GARAGE DOOR CONTROL)	30

1 - INTRODUCTION

Welcome to your new anywAiR smart air conditioning system.

The information provided in this user manual will help you get the most out of your new air conditioning system.


Upon first power up, the system will take a few minutes to initialise.
If you walk away from your screen it will go to sleep, to wake the screen simply double tap on a corner of the screen.

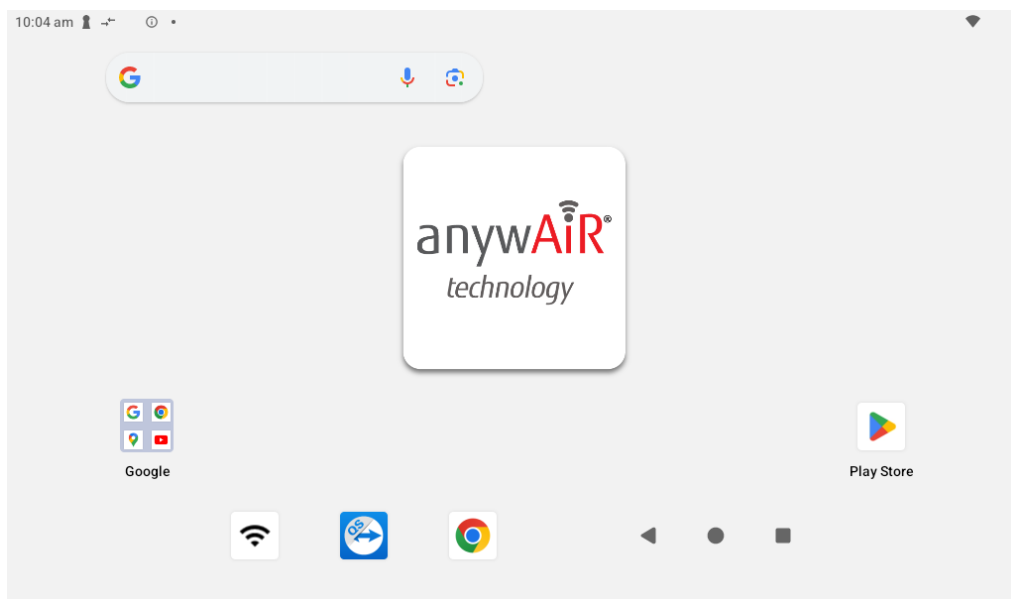

This is your home screen, press the large anywAiR button to start the anywAiR app.

2 - MODE PAGE

The Mode screen on the anywAiR app allows you to control your air conditioner's operation.

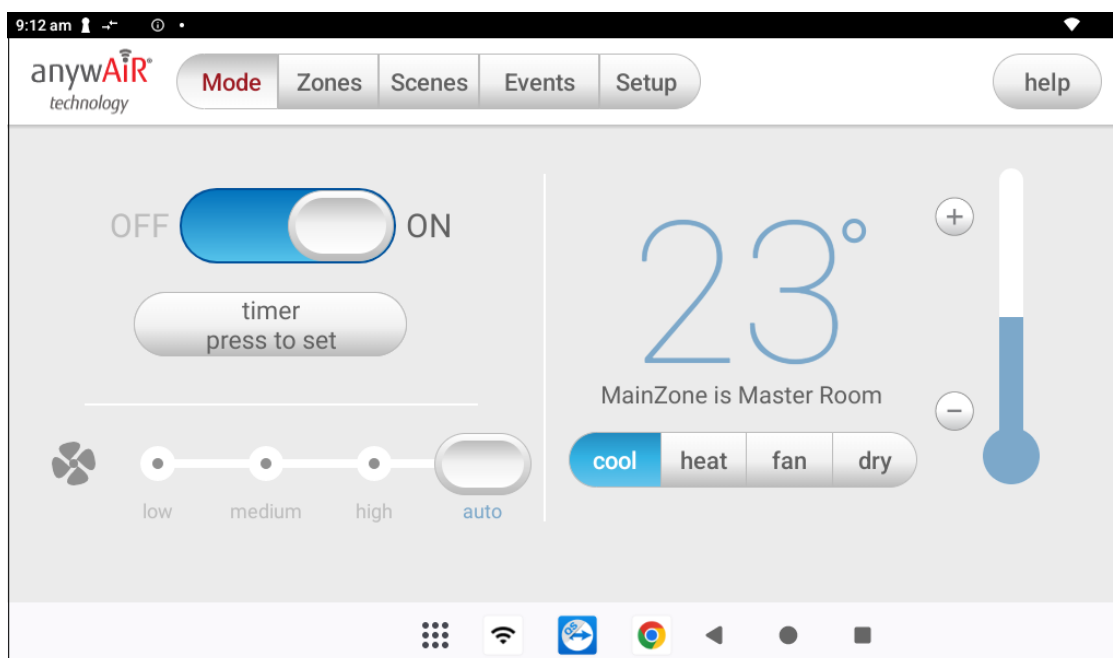

From the Mode Screen you can perform the following actions:

- Turn the air con unit ON or OFF;
- Set an ON or OFF Timer;
- Select the unit FAN speed;
- Set the Target Temperature; and
- Select the air con unit mode.




2 - MODE PAGE

Simple Timer

The Simple Timer can be used to turn the air con unit ON or OFF after a set time. The timer can be set up for 12 hours in advance.


Pressing the Trash icon clears the timer.

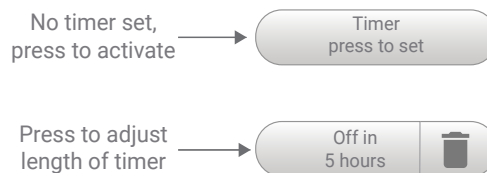

NOTE: This is a once-only timer that does not repeat each day. More advanced timers can be setup in the Scene Page.


Target Temperature

The Target Temperature is the temperature you would like to achieve. Press the + or - symbols to adjust the number.

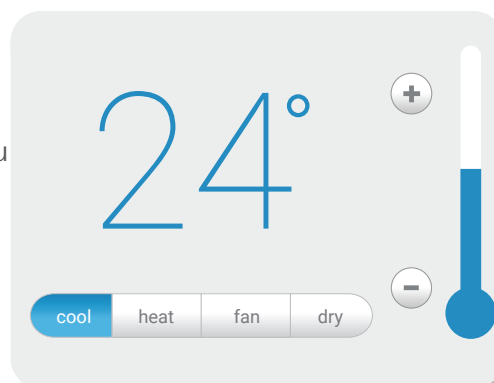

Fan Speed


The air con Fan speed can be set to LOW, MEDIUM, HIGH or AUTO

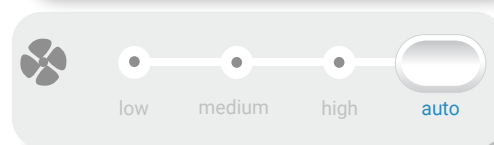

HANDY TIP: Your air con unit is most efficient when maintaining a Target Temperature. Ensure your Target is set to a Temperature that is comfortable for you. Cooling or Heating a home past what is comfortable will result in higher energy usage.


Operation Mode Selector

 - **COOL** - Cool your home in summer
- **HEAT** - Warm your home in winter
- **FAN** - Used to recirculate air within the home, a great energy efficient option if you just want to move some air around the home as only your fan in the roof space will run & not the outside unit.
- **DRY** - This can be used to reduce the humidity in your home.
- **AutoMode** - This will average all open zones and aim to maintain them at a temperature between the set minimum and maximum temperatures. The AutoMode settings can be changed in option page.



3 - ZONES PAGE

Press Zones button on the menu bar to bring up the Zones Screen.

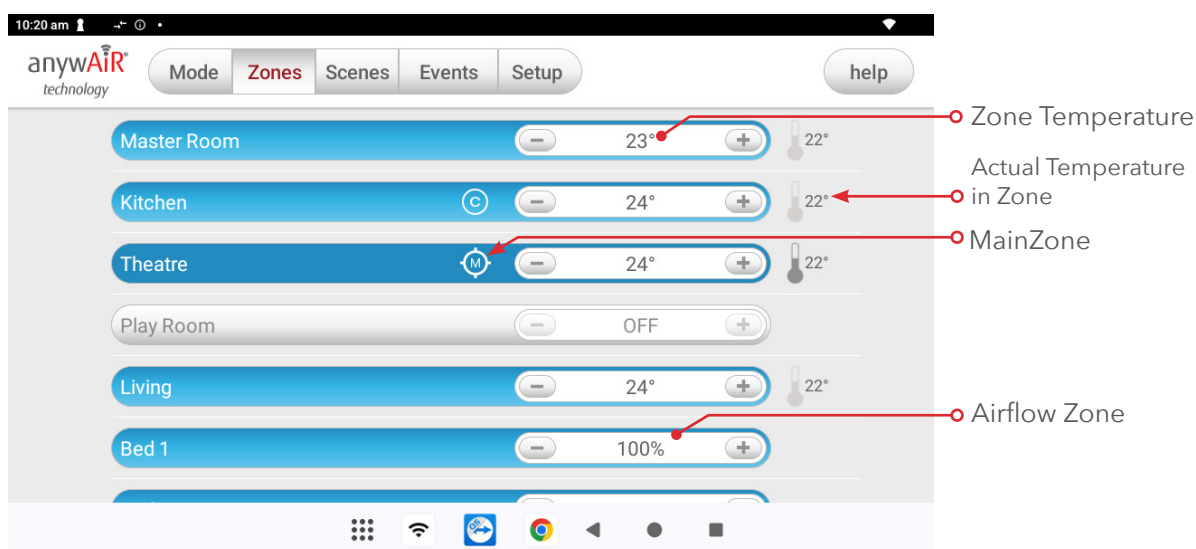

Pressing a Zone name toggles that Zone between ON and OFF. Zones are OFF when they are in grey colour.

There are four different types of zones in anywAiR depending on the option you selected when purchasing your system.

- **Airflow Zone**

If there is no sensor installed in a particular zone then it will be shown as an AIRFLOW zone. In this instance, you have the ability to control the air in 5% increments. Use the - / + buttons when a zone is turned ON, to adjust the amount of airflow going to that zone.

- **Temperature Zone (Optional)**


If your zone has a temperature sensor installed, anywAiR will allow you to choose your desired temperature with the - / + buttons. AnywAiR will aim to maintain the desired temperature in that zone by automatically controlling airflow when the air conditioner is running.

4 - TEMPERATURE CONTROL (OPTIONAL)

MainZone

The MainZone feature makes that particular zone the “information centre” for the air conditioning unit. That means the set-point for that zone becomes the set-point the air conditioning unit will work toward. The actual measured temperature of that zone is the temperature sent to the unit for it to make its decisions about whether to start/stop or speed up/down to effectively achieve the set-point while maintaining constant airflow in the MainZone.

The MainZone can be any temperature controlled zone that is currently turned ON, to change the MainZone to another zone press the thermometer symbol next to the zone you want to be the new MainZone.

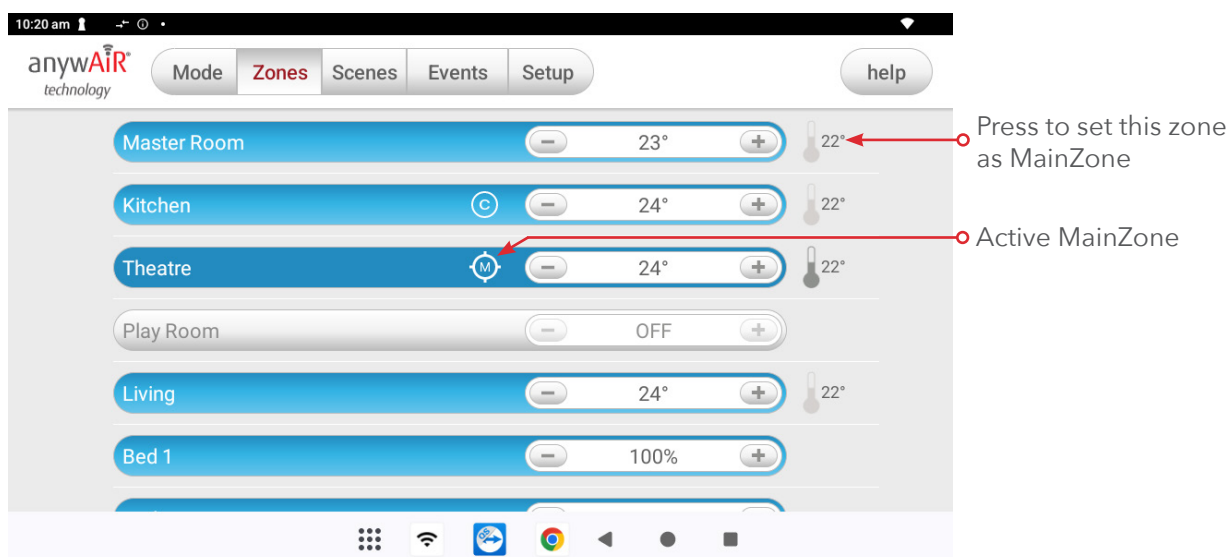

This feature can be particularly important when you have an unusually high requirement for air conditioning in a particular area. For example, a group of people watching a movie in Theatre room with all the electronic A/V equipment turned on will have a larger requirement for air conditioning than in other rooms in the house. Setting the Theatre as MainZone will ensure that the system continues running until the temperature set-point for that room is achieved.


Only one temperature controlled zone can be the MainZone at any one time, if you are using multiple zones it is recommended that you make the largest zone the MainZone and then move the MainZone around as you move around the home. MainZone is an optional feature available on systems where MainZone has been enabled; your dealer may enable this feature depending on the way you use your system and the layout of the installation.

NOTE: MainZone is not available for systems with no temperature sensors installed.

4 - TEMPERATURE CONTROL (OPTIONAL)

MainTemp

This feature acts as an automated MainZone. MainTemp will automatically select the zone with the greatest difference between actual and desired temperatures. Once this zone is selected and the desired temperature is reached, a new room will be selected and the process repeated.

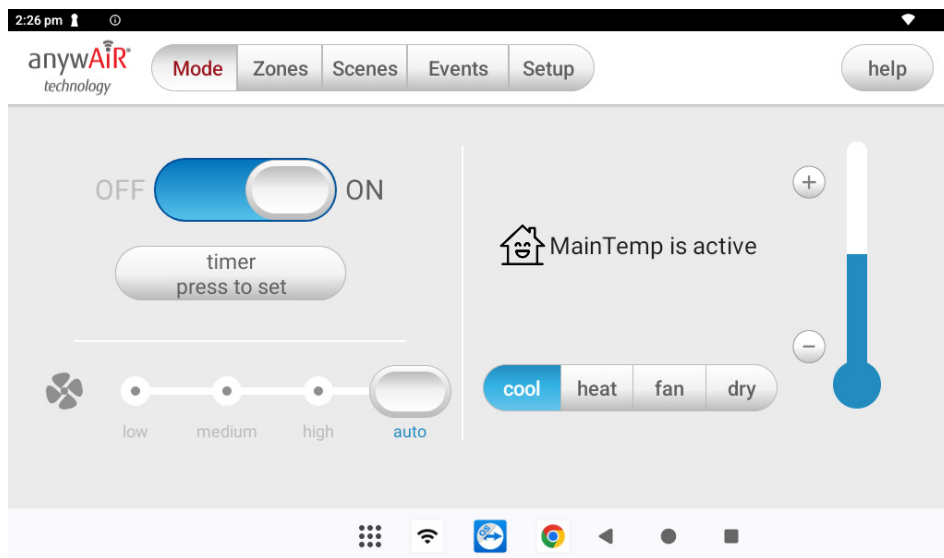

NOTE: This mode is only available when using cooling or heating.

There is no need to manually set a zone to be MainZone. anywAiR will select a zone as MainZone for you.

This feature can be particularly important when you have an unusually high requirement for air conditioning in a particular area at a given time. For example, a group of people is watching a movie in Theatre room. After two hours, they eat dinner together. MainZone will transfer automatically from Theatre room to dining room when the dining room demands higher requirement. Different temperature can be set on each zone and anywAiR will keep changing MainZone to achieve the desired temperature for each zone.


When this option is enabled, changing the temperature in mode page and manually selecting a room as MainZone is disabled. The adjustment of temperature can only be done on zone page.

4 - TEMPERATURE CONTROL (OPTIONAL)

AutoMode

Taking MainTemp to the next level, AutoMode gives you full temperature automation. This feature not only selects a zone as MainZone, it will also change the mode of Aircon between cooling and heating.

When enabled it will average all open zones temperature and aim to maintain them at a temperature between 20 and 24 degrees (default range). This temperature range can be adjusted in options page.

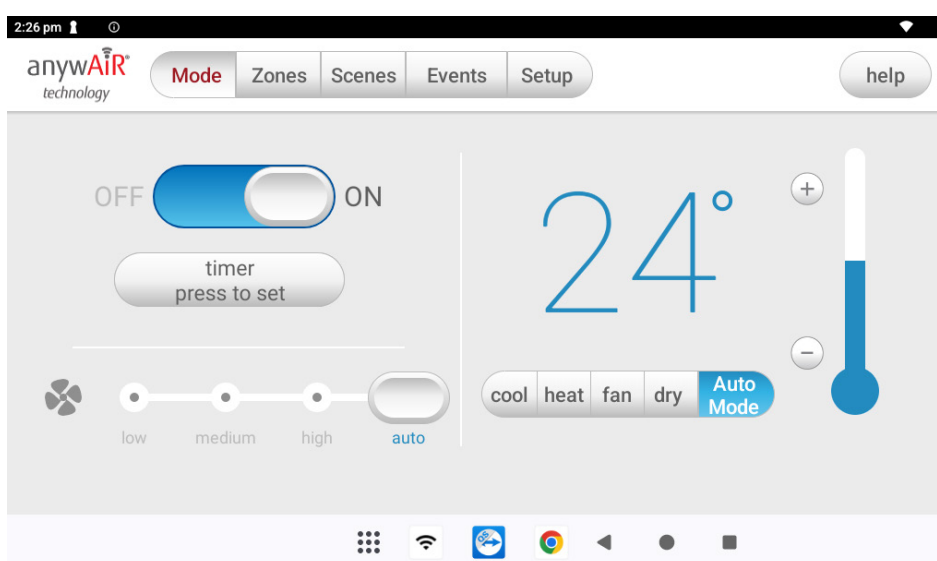

Once this feature is enabled you can select it on the main mode page.

This feature is ideal for ever-changing weather conditions, during the day and night. anywAiR will change the mode to heat on a chilly morning and to cool during a hot midday. Like in MainTemp, it will automatically assign the MainZone to an open zone that needs a higher requirement.


When this option is enabled, changing the temperature and MainZone is not allowed. anywAiR will take care of it.

5 - CONSTANT ZONES

Depending on your specific installation, your anywAiR system may be set up with electronic Constant Zones. These are pre-programmed by your installer to relieve excess air pressure in your air-conditioning system if insufficient zones are open.

Constant Zones are noted with a small letter C to the right of the zone name. Your installer may setup 1, 2 or 3 constant zones depending on the size of your system & the design of the home.

Example: Below you can see one constant zone is set, Zone 1 indicated by the C to the right of the zone name.

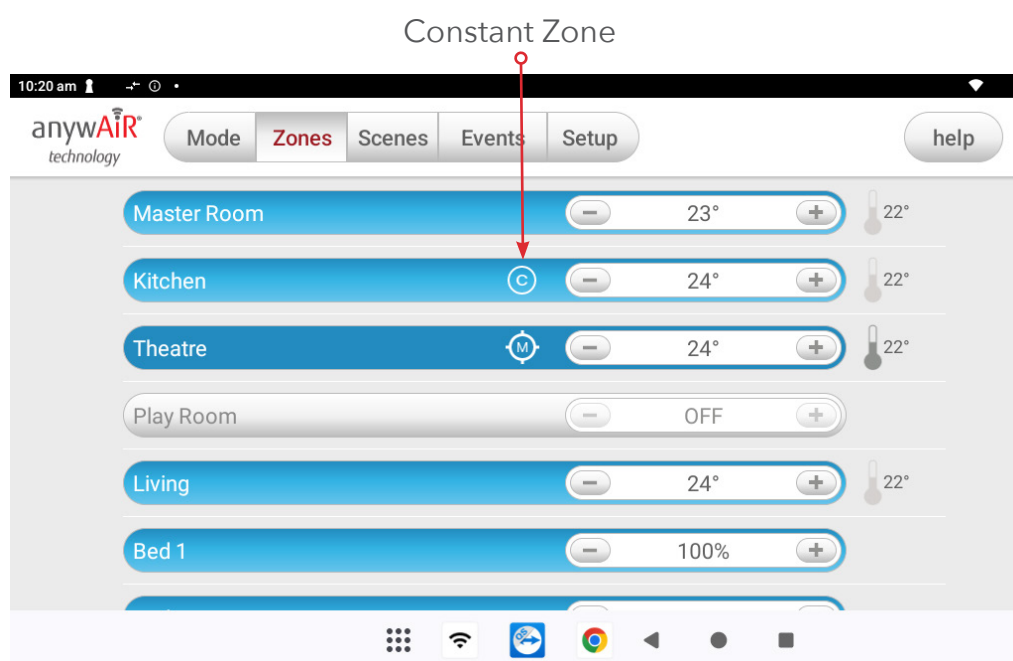


In this example this zone may open automatically to relieve excess air pressure when needed.

6 - SCENES PAGE

Scenes allows you to set your air con to a pre-determined setting at the touch of a button.

For example, you can set up a scene which turns the air con on from Monday to Friday at 7am, at 23 degrees in cooling mode during Summer.

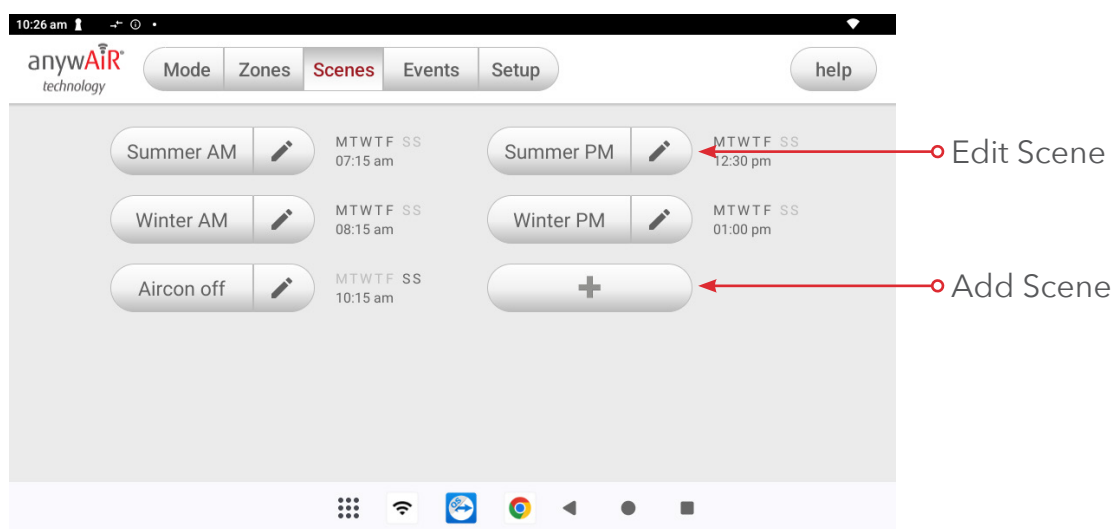

Custom Scenes


You can add up to 12 custom scenes.

Creating a Custom Scene

To create a new Custom Scene press the + button. This will bring up the Scene Editor page.

7 - SCENE EDITOR PAGE

The Scene Editor screen as shown below is where you can configure any new or existing scenes.

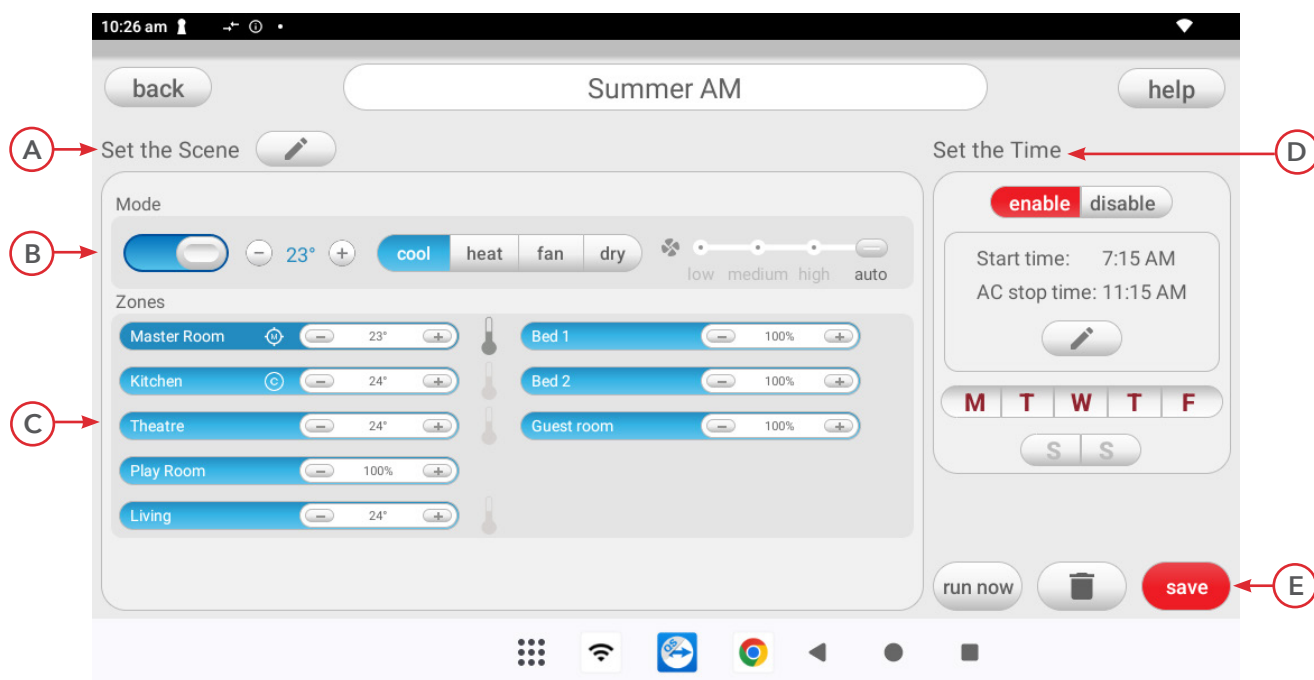

A. Set the Scene Window

This window allows you to control what the scene will do to your aircon.

B. The air con status & temp, mode and fan speed can be change in this section.

C. The zone status & temp or airflow and the MainZone can be change in this section. The Fresh Air status can also be set to enabled or disabled.

D. Set the Time Window

This window allows you to set a time and choose which days for your scene to run and the time when the aircon will turn OFF. The schedule can be enabled and disabled.

E. Saving, Running and Deleting a Scene


All changes to a Scene must be saved by pressing the save button.

You can run a scene from the editor screen by pressing the "Run Now" button.

If the scene is no longer needed then it can be deleted by pressing the trash button.

8 - EVENTS PAGE

Events give you the ability to set and run 'tasks' when specific events happen around your home during a designated period of time.

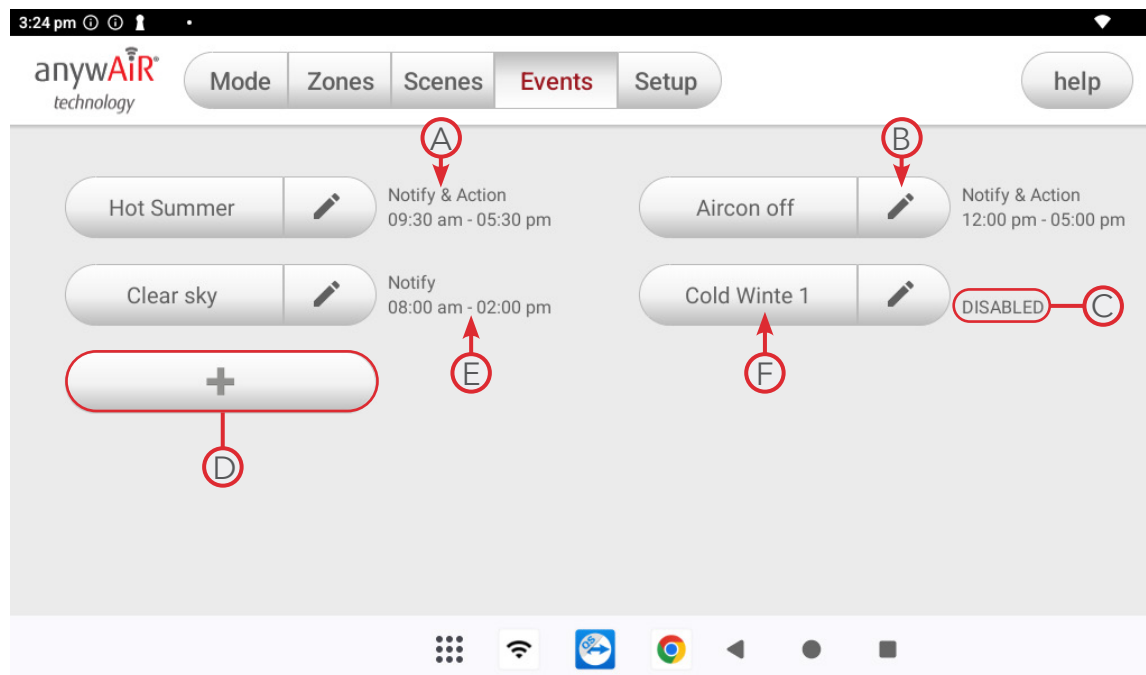

- A** - This shows what task is enabled on this event.
- B** - Press to edit an event.
- C** - This shows when an event is disabled.
- D** - Press the button to create an event
- E** - This shows the time when an event is active.
- F** - Press the event name to display the summary of the event.



9 - EVENT EDITOR PAGE

Events will monitor the selected event(s) during the selected time period and day(s). When the conditions are met, the selected task will run.

NOTE: Make sure your wall mounted touch screen is connected to your Wi-Fi. To start creating an event, set your post code first in options page.

A- Conditions

These are the conditions that need to be met first before a task will triggers. This can trigger the task once per day. You can select multiple "single occurrence" conditions and all of them must be met for task to trigger.

B- Tasks

These are the actions that will take place when a condition(s) is satisfied.

C- Active Times

This is where you set the schedule when the event will be active.

D- Bin Button


Press to delete the event.

E- Save Button

Press to save and exit the event.

9 - EVENT EDITOR PAGE

Conditions

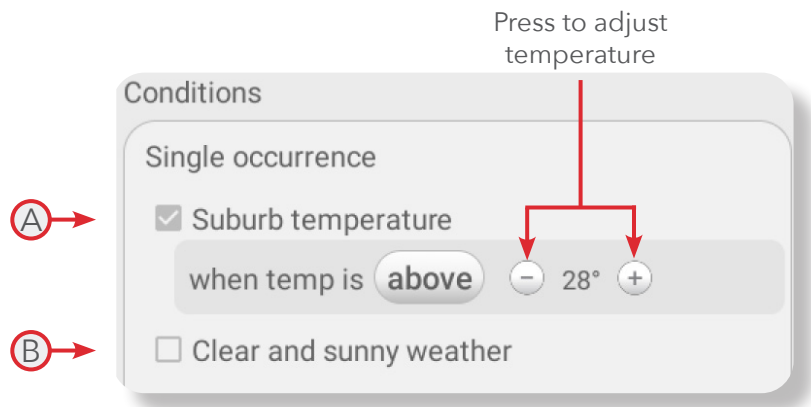


A- Suburb temperature

This condition will be satisfied when the current temperature of your location is above or below the set temperature.

B- Clear and Sunny weather

This condition will be satisfied when the forecast in your location is "Sunny" or "Clear".

Tasks

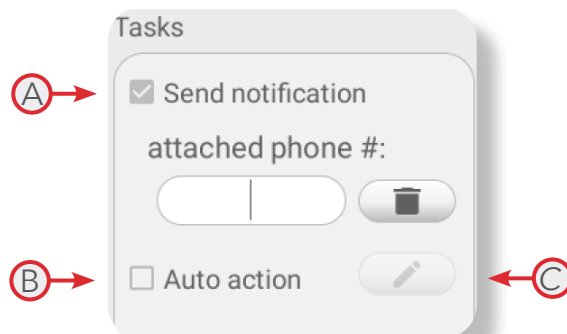

A- Send notification

This task will send a notification to all paired phones. When you set a phone number in this task, a call button will appear after opening the notification. This will give you an option to have a quick call to the phone number set.

NOTE: The notification will not go to the number set. The number set will show in the notification on your paired phones.

B- Auto action

This task will initiate your things to run according to the set configurations.


C- Edit Auto action

Press to edit the auto action.

NOTE: Don't forget to press the button to save the configuration made in the auto action.

10 - SETUP PAGE

The Setup Screen allows you to configure your anywAiR system. From this screen you can perform the following actions:

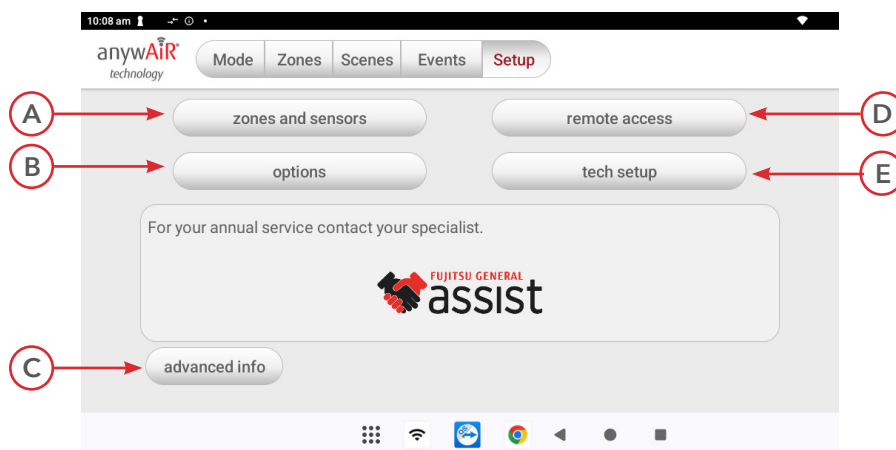

A zones and sensors

Press this button to change the zone names. You will be presented with a list of all your zones and you can press any zone to edit the name. Zone names can be up to 12 characters in length. You can also pair temperature sensors to zones in here.

B options

This button opens the option page to configure anywAiR settings.

C advanced info

This page will display information about your system and the way it has been configured; this info may be used by your air conditioning professional when servicing your system.


D remote access

This button opens the remote access screen. You can change the system name and enable or disable the remote access here.

E tech setup

This button is used by your air conditioning professional to configure and commission your system on the day of installation; there are no user settings in this menu.

11 - OPTIONS

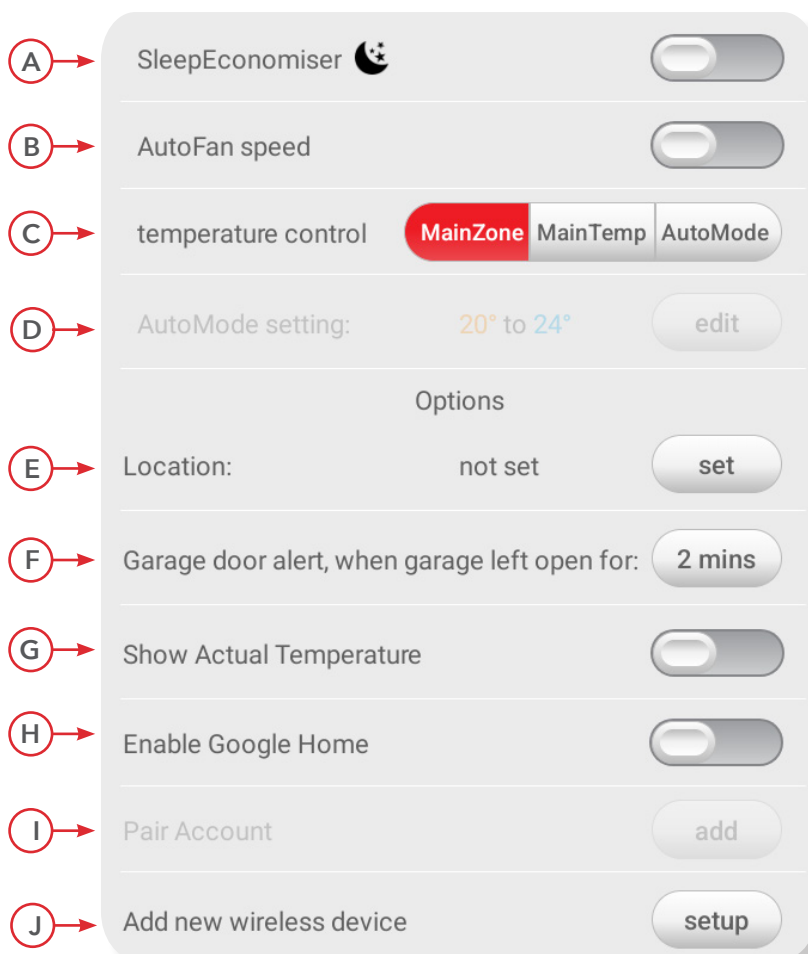

A- SleepEconomiser

This mode will automatically adjust your air conditioner from COOL to FAN mode overnight from 10pm to 6am, it will then adjust itself back. If you are looking to save energy during hot summer nights or help reduce noise for sleeping neighbours, this mode is for you.

B- AutoFan Speed

This feature allows the zone controller to automatically adjust the unit fan speed based on the current number of open zones.

C- Temperature Control

Select which temperature control option you want to use. For more information, refer back to page 15, 16 and 17.

D- AutoMode Setting

Set the temperature range that AutoMode will maintain.

E- Location

Set your suburb post code for Events to work properly.

11 - OPTIONS

F- Garage door alert

Set how long the garage is left open before it send an alert. It will continue to send notification every 30 minutes until the garage door is closed.

G- Show Actual Temperature

This will let you see the actual room temperature measured by the sensor.

H- Google Home

Enable or disable Google Home.

I- Paired Accounts

Link your account to Google Home.

J- Add new wireless device

This is where you setup and connect your wireless garage.

12 - GOOGLE HOME

Your AnywAiR system works with Google Home. Before you can use Google Home to control your AnywAiR system, you need to link your system to Google Home first.

How to Link AnywAiR Ducted to Google Home (Android)

1. Install the Required Apps


- Open the Google Play Store.
- Make sure the following apps are installed and updated:
 - Google Home
 - Google Assistant (usually pre-installed)

2. Link AnywAiR ducted in Google Home

- Open the Google Home app.
- Locate Add Button to link a service which works with google.
- Search for "**AnywAiR Ducted**" and select it.
- Follow the prompts and confirm to continue.

3. Link Your Account and Assign the Aircon to a Room

- On the wallmounted touch screen, open the AnywAiR app.
- Go to Setup -> Tap Enable Google Home button to activate Pair Account, then tap the add button under Pair Account.
- Press generate to create a one-time access code.

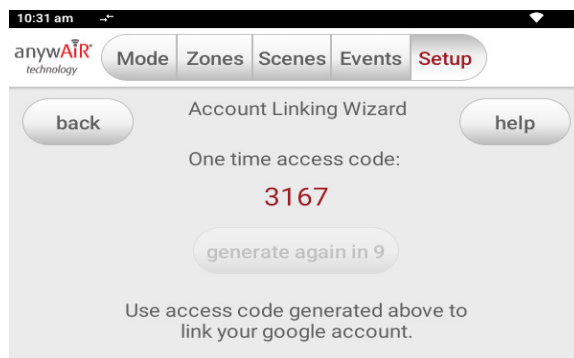

- Enter the 4-digit PIN code from the touch screen into the Google Home app on your Android device.

If you need help, visit Google's support page:

<https://support.google.com/googlenest/answer/9159862?hl=en-AU>

please call our tech support team for assistance.

12 - GOOGLE HOME

Once you have linked Google Home to AnywAiR, you can do the following:

- Basic air-conditioning control (on/off, mode, temperature, fan speed)
- Open or close the garage

There are several ways you can use Google Home to control your system:

1. Voice Commands

You can now control the system using Google Assistant. Examples:

"Hey Google, turn on/off the aircon."

"Hey Google, set the aircon to 22 degrees."


"Hey Google, change the fan speed to high."

"Hey Google, open (or close) the garage door."

You can also open the Google Assistant app, tap the microphone icon, and say the same commands without needing to say "Hey Google" first.

2. Google Home App

- Open the Google Home app.
- Tap the **Aircon** button to turn the aircon on or off.
- Tap the **Garage** button to open or close the garage door (if applicable).
- Press and hold the **Aircon** button to access additional aircon controls.
- Press and hold the **Garage** button to bring up the Open/Close control.

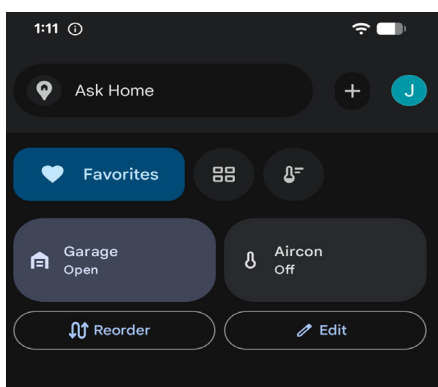

NOTE: Please be aware that the Google Home app allows for temperature adjustments in 0.5° increments. In contrast, the anywAiR wall-mounted touch screen only supports 1.0° increments. This difference is a standard characteristic of the Google Home interface and cannot currently be adjusted within the anywAiR settings.

12 - GOOGLE HOME

3. Google Home Widgets

Android

- Long-press (tap and hold) on an empty area of the home screen -> select Widgets.
- Scroll through the widget list and look for **Home**.
- Tap and hold the Google Home Device Control widget, then drag it to your home screen.
- Choose Favorites to show your favourite devices, or Custom to select specific devices on the Widget Controls page.



iPhone

- Long-press (tap and hold) on an empty area of the home screen until the apps start to jiggle.
- Tap the Edit button in the top-left corner and then Tap **Add Widget**.
- Search for **Google Home** and tap **Add Widget**.
- Press and hold the widget, then tap **Edit Widget**.
- Tap **Home** and choose your home. Tap **Widget Controls --> Custom--> Add new item**, then select the items you want to show (for example: Aircon and Garage). Tap anywhere outside the widget to exit editing.
- Note: Google Home widgets on iPhone act more like shortcuts rather than traditional interactive widgets.

In Android now you can:

Tap the **Aircon** icon -> turn on/off quickly


Tap **Garage** -> open/close (if applicable)

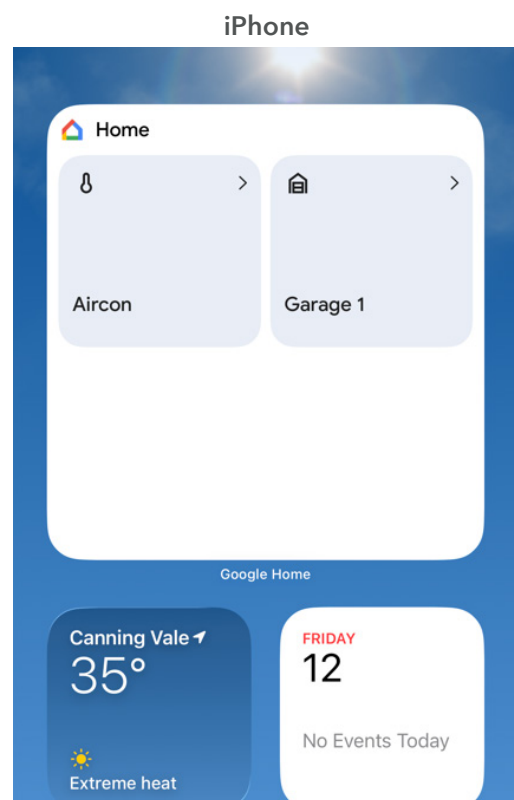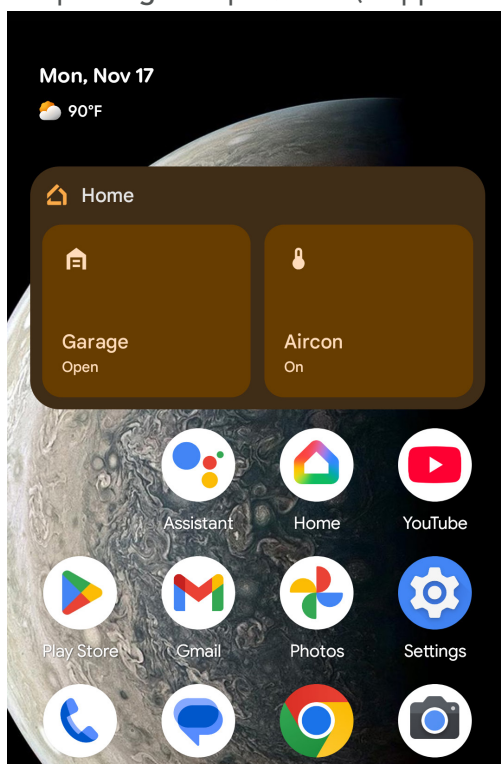

13 - OPTIONAL ADD-ONS

Garage Door Control

The anywAiR system has the capability to integrate with a wireless garage door controller, allowing you to monitor and operate your garage.

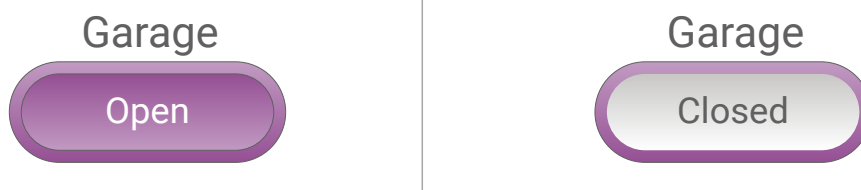

- **Standard Interface:** Standard Interface: If installed, a Garage door button will appear on your Mode page. Pressing the Open or Closed buttons will cause the garage door to open or close. These buttons will also show the current state (opened or closed). The 3 screenshots below show the Garage button for the Apple, Android and tablet apps.
- **Adding a New Device:** To pair a new wireless garage controller, navigate to Setup > Options and select Add new wireless device.
- **Garage Door Alerts:** You can configure safety notifications to ensure your home remains secure.
 - a. Navigate to Setup > Options > Garage door alert.
 - b. Set a time limit (e.g., 2 minutes) for how long the door can remain open before a notification is sent to your paired devices.
 - c. The system will continue to send a reminder every 30 minutes until the door is closed.
- **Smart Home Integration:** Once linked to Google Home, you can use voice commands such as "Hey Google, open the garage door" or use dedicated widgets on your smartphone for quick access

